

Operating Instructions

2nd Generation

Frequency and Mode Switch Box for TIMTER™ Transmitters

P/N: QSX-AC-DSWBX



Quasonix, Inc.
6025 Schumacher Park Dr.
West Chester, OH 45069
27 April 2018

Revision 1.0.1

Specifications subject to change without notice.

All Quasonix products are under U.S. Department of Commerce jurisdiction; not covered by ITAR

Table of Contents

1 Introduction 1

2 Channel..... 2

3 Mode 3

4 Frequency 4

5 Error LEDs 5

6 Pinouts 6

7 Drawing..... 7

8 Switch Box Display Adjustments 8

9 Maintenance Instructions..... 10

10 Product Warranty 11

11 Technical Support and RMA Requests 12

List of Figures

Figure 1: Frequency and Mode Switch Box for TIMTER™ Transmitters with Cable Harness 1

Figure 2: 2nd Generation Switch Box Channel Selection 2

Figure 3: 2nd Generation Switch Box Mode Selection..... 3

Figure 4: 2nd Generation Switch Box Frequency Selection..... 4

Figure 5: 2nd Generation Switch Box Error LEDs..... 5

Figure 6: Female MDM-9 Connector 6

Figure 7: 2nd Generation Switch Box Drawing 7

Figure 8: Increase LED Display Brightness Key Press Example..... 8

List of Tables

Table 1: Switch Box Pinout 6

Table 2: Internal Display Parameters for the 7 Segment Displays 9

1 Introduction

The 2nd Generation Quasonix switch box provides six LED digits used to display the mode and frequency. This includes a total of five digits of frequency step up or down, in MHz, and one digit of mode selection, in terms of the ARTM “Tier” number. There is also a channel selector for channel 1 or channel 2. Two channel operation is only valid when connected to a Dual Telemetry Transmitter. Standard transmitters default to Channel 1. Included with the switch box is an 18” MDM-9 to MDM-9 cable harness.



Figure 1: Frequency and Mode Switch Box for TIMTER™ Transmitters with Cable Harness

2 Channel

When the switch box is attached to a Dual Telemetry Transmitter, the user may toggle between channel 1 and channel 2 using the CH Select button, as shown in Figure 2. CH1 or CH2 LED indicators illuminate when a channel is selected. Only one channel selection LED illuminates at a time.

Standard single channel transmitters default to channel 1. If a user attempts to set a single channel transmitter to channel 2, the word “single” is briefly displayed on the character displays, and the channel remains set to CH1.



Figure 2: 2nd Generation Switch Box Channel Selection

3 Mode

The mode buttons allow the user to select the ARTM waveform type for transmission, as shown in Figure 3. Numbers between zero and 15 (hex F) (0-9 and A-F) may be selected. The top button (+) scrolls up from 0-F, while the bottom button (-) scroll down from F-0. The up and down buttons wrap at zero (0) and hex 15 (F).

Valid modes are determined by the modes available on the attached transmitter. Presently, modes 0 through 14 (hex E) are supported. The digits equate to the ARTM “Tier” number, as shown below:

- 0 = ARTM Tier 0, PCM/FM
 - 1 = ARTM Tier I, SOQPSK
 - 2 = ARTM Tier II, ARTM (Multi-h) CPM
 - 3 = BPSK (requires PSK option)
 - 4 = QPSK (requires PSK option)
 - 5 = AQPSK (requires PSK option)
 - 6 = Carrier
 - 7 = OQPSK (requires PSK option)
 - 8 = UQPSK (requires PSK option)
 - *9 = AUQPSK (requires PSK option)
 - *10 = STDN (requires STDN option)
 - *11 = SQPN (requires SQPN option)
 - *12 = AFM (requires FM option)
 - 13 = STC (requires STC option)
 - *14 = DPM
- * Not currently available on the Quasonix Dual Transmitter



Figure 3: 2nd Generation Switch Box Mode Selection

4 Frequency

Each of the five (5) frequency digits is selected independently using the push buttons above or below each digit, as shown in Figure 4. Numbers between zero and nine (0-9) may be selected. The top buttons (+) scroll up from 0-9, while the bottom buttons (-) scroll down from 9-0.



Figure 4: 2nd Generation Switch Box Frequency Selection

5 Error LEDs

Invalid frequency or mode selections result in an error condition, illustrated by two Error LEDs (Figure 5). If channel frequency or mode is outside of the allowable range, the channel Error LED illuminates. The Error LED remains on until the error is corrected, even if the user switches channels. For example, if the user is looking at, or setting, channel 1, they will know if there is an error on channel 2 that must be corrected.

Note: Currently, dual transmitters do not support independent modulations on the two channels (coming soon). Therefore, if the modes for the two channels are not the same, BOTH Error LEDs will blink until the problem is corrected, regardless of other errors.



Figure 5: 2nd Generation Switch Box Error LEDs

6 Pinouts

The Switch Box has one external connector—a female MDM-9—shown in Figure 6 with pin locations labeled.



Figure 6: Female MDM-9 Connector

The pin assignments for the switch box MDM-9 connector are listed in Table 1.

Table 1: Switch Box Pinout

Pin	Function
1	Ground
2	I/O 1
3	SPI SCLCK
4	SPI MISO
5	Transmitter Replies to Switch Box
6	2.8 V+ Output
7	SPI MOSI
8	SPI CS
9	Switch Box Commands to Transmitter

7 Drawing

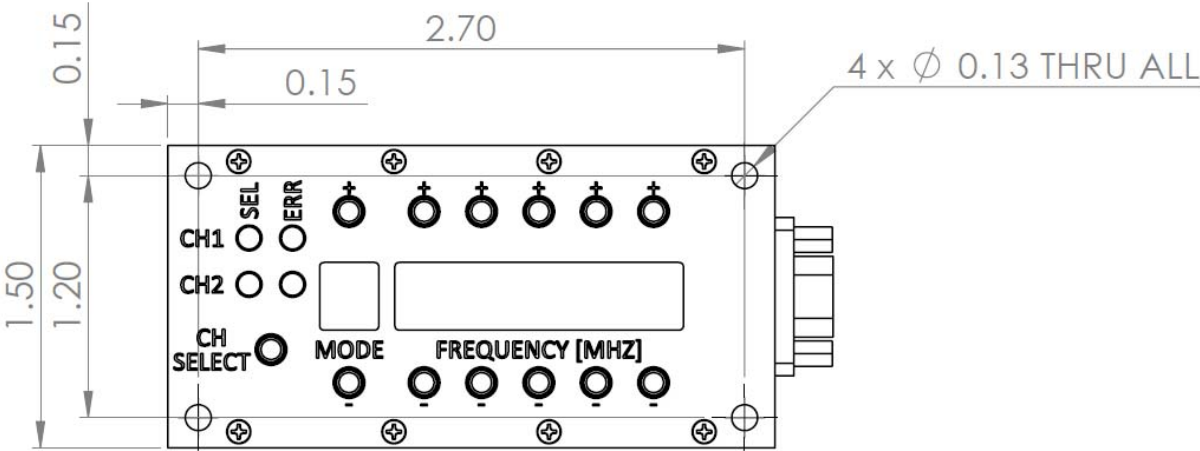


Figure 7: 2nd Generation Switch Box Drawing

8 Switch Box Display Adjustments

The following special button combinations may be used to brighten or dim LEDs or character displays.

All buttons *must be pressed at the same time*.

- LED display PWM percentage increase: (CH_SEL | UP_MODE | DN_MODE) (Figure 8)
This button combination increases the PWM percentage for the LED displays to make them brighter. The default is 1%.



Figure 8: Increase LED Display Brightness Key Press Example

- LED display PWM percentage decrease: (CH_SEL | UP_0_1 | DN_0_1)
This button combination decreases the PWM percentage for the LED displays to make them dimmer.
- 7 segment character PWM percentage increase: (CH_SEL | UP_1000 | DN_1000)
This button combination increases the PWM percentage for the 7 segment displays to make them brighter. The default is 20%.
- 7 segment character PWM percentage decrease: (CH_SEL | UP_1 | DN_1)
This button combination decreases the PWM percentage for the 7 segment displays to make them dimmer.
- Display system parameters: (UP_100 | DN_100 | UP_10 | DN_10)
This button combination starts a subset of the internal parameters cycling on the 7 segment displays. Pressing any button exits the loop and returns the switch box to normal operation. The parameters are displayed in order, as shown in Table 2.

Table 2: Internal Display Parameters for the 7 Segment Displays

Parameter	Parameter Number	Example Display	Description
FW_VERSION	0	F1.013	Firmware version
SERIAL_NUMBER	1	102435	Serial number
DUAL_SWBX	2	dual (single)	Single or dual switch box
T4_SWBX	3	t3 (t4)	T3/T4 (N/A on a dual)
CUR_CHAN	4	ch1 (ch2)	Current channel
CH1_MODE	5	0 [ch1]	Channel 1 mode
CH1_FREQ	6	1 2200.5	Channel 1 frequency (MHz)
CH2_MODE	7	0 [ch2]	Channel 2 mode
CH2_FREQ	8	1 2304.5	Channel 2 frequency (MHz)
ALLOWED_MODES	9	- 2047	Allowed modes
LED_PWM_PERCENT	10	led001	LED 1% PWM
CHAR_PWM_PERCENT	11	dsp020	Displays 20% PWM
INDEP_MODES	12	notind	Independent mode or not

9 Maintenance Instructions

The Switch Box requires no regular maintenance, and there are no user-serviceable parts inside. Please consult Quasonix for any maintenance, upgrade, or repair requirements.

10 Product Warranty

The Switch Box carries a standard parts and labor warranty of one (1) year from the date of delivery.

11 Technical Support and RMA Requests

In the event of a product issue, customers should contact Quasonix via phone (1-513-942-1287) or email (support@quasonix.com) to seek technical support. If the Quasonix representative determines that the product issue must be addressed at Quasonix, a returned materials authorization (RMA) number will be provided for return shipment.

Authorized return shipments must be addressed in the following manner:

**Quasonix, Inc.
ATTN: Repair, RMA #
6025 Schumacher Park Drive
West Chester, OH 45069**

To ensure that your shipment is processed most efficiently, please include the following information with your product return:

- Ship To – Company name, address, zip code, and internal mail-drop, if applicable
- Attention/Contact person – Name, Title, Department, Phone number, email address
- Purchase Order Number – If applicable
- RMA Number – provided by the Quasonix representative

Please note that Quasonix reserves the right to refuse shipments that arrive without RMA numbers.